
# ASSEMBLY INSTRUCTION MANUAL



## SCORER II EURO SCORER II FOOSBALL TABLE

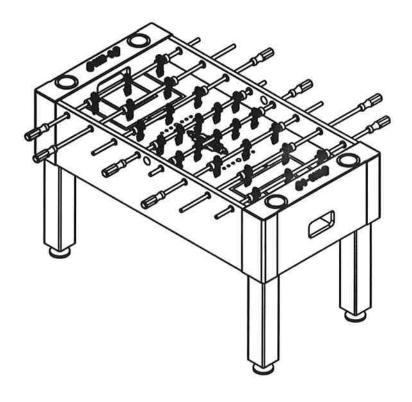


ITEM NO. 51-906143-000 REV. 2 DATE: 7/20/2016

#### Assembly Instructions:

- 1. Remove all parts and accessories from parts box.
- 2. Turn cabinet upside down, take care not to scratch the top (use the shipping carton or assemble on carpet.)


(See Diagram #1 for steps 3 through 7)


- 3. Insert the legs into the holes in the bottom of the cabinet at each corner.
- 4. Assemble the nuts and washers to the leg bolts and securely tighten with a wrench.
- 5. Thread one Foot Leveler Assembly into the threaded nut plate on the bottom of each leg.
- 6. Use two people to set unit upright and wipe off with a damp cloth.

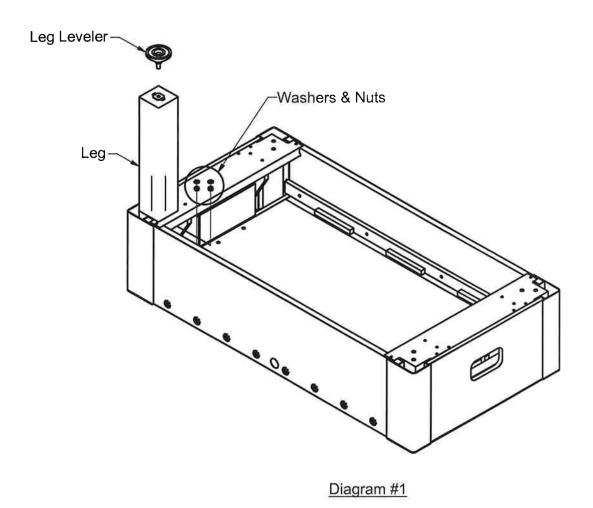

(See Diagram #2, #3 and #4 for steps 7 & 8)


- 7. Slide appropriate rods through the corresponding bearing holes (be careful, there are two (3)man rods and the shortest of these two rods is the goalie rod). Slide the rod through one side of the cabinet and wipe a thin coating of lubricant on the rod using a cloth or paper towel. Install one (1) black rubber bumper onto the rod (make sure that the side of the bumper with the holes always faces the cabinet wall).
- 8. Slide the appropriate number of players onto each rod facing the opponents goal (*black* players face grey players goal and grey players face black players goal) followed by another rubber bumper on the far end. Slide the end of the rod through bearing hole in the opposite cabinet wall.

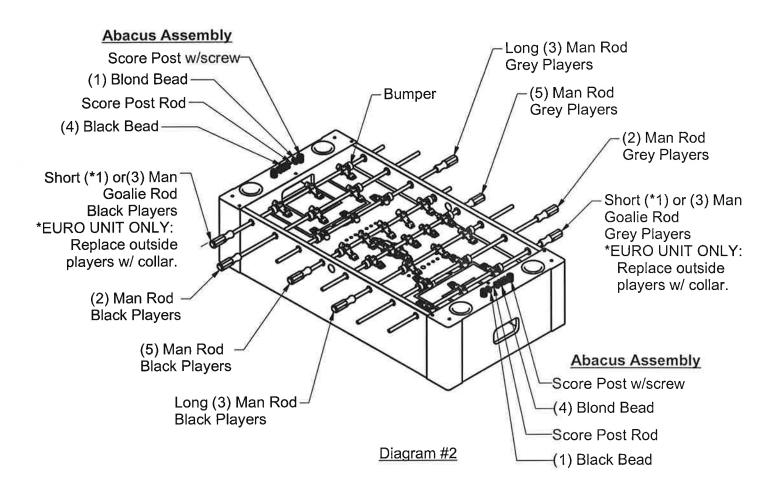


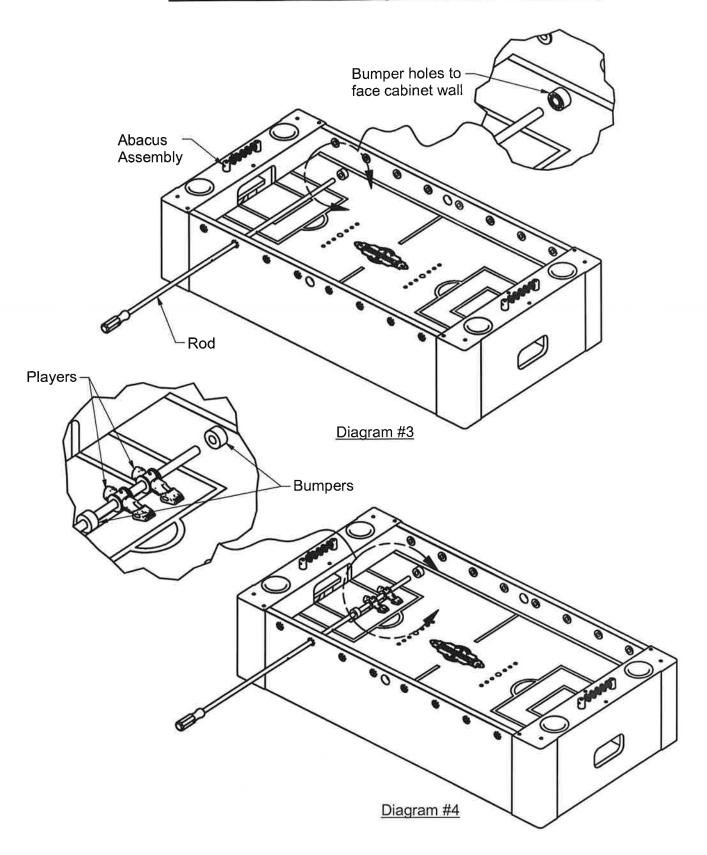

- 9. To secure each player/collar, align the hole in each player/collar with the hole in the rod. Be sure the appropriate number of players/collars for each rod are properly positioned before securing any players. Using the rod support block under the rod near the man, place the roll pin in the hole and drive it through the man/collar with a hammer until it is flush on both sides. (Diagram #5) (See Diagram #8 for collars used on EURO UNIT ONLY).
- 10. To secure each wooden handle align the hole in each handle with the hole in the rod. Using the cabinet wall as support, place the roll pin in the hole and drive it through the handle with a hammer until it is flush on both sides. (Diagram #6)
- 11. Attach the Abacus components as shown on each end of the cabinet.

  See Diagram #2 for the color arrangement of the Beads for each end in relation to the Player color arrangement. (Diagram #7)

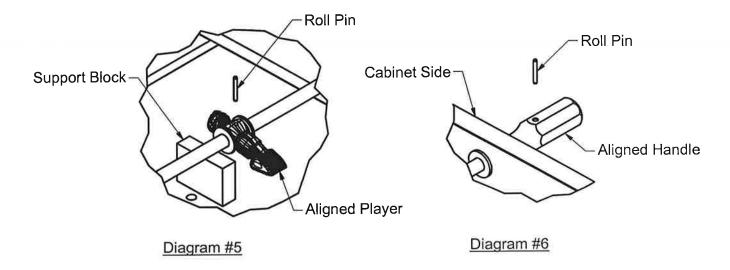

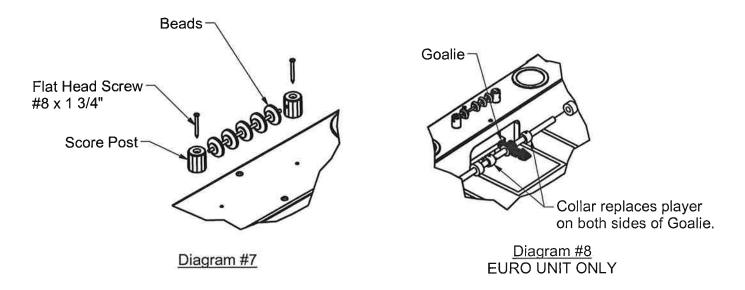

- 12. Once all assembly has been completed, and the unit is place in position, level the unit using the leg levelers. Adjust each leveler to raise or lower the unit as needed to bring the unit into a level playing condition. Once level tighten the locking nut on each leveler to prevent movement.
- 13. Lubricate the game at least once a month. In order to lubricate, first wipe each rod with a clean dry cloth. Second, pull the handle end of each rod out towards you and apply one drop of lubricant to the top of the rod, approximately one inch from the outside of the game. Continuously spin the rod while pushing it in and pulling it out of the game. Finally, remove any excess silicone with a clean soft cloth. (Liquid silicone lubricant works best-not provided)
- 14. In the event that a player, or players, need to be removed for replacement use the roll pin punch included with your unit. Using the support block, used during assembly, place the pointed end of the punch into the roll pin and drive it out. The roll pins are reusable. Be sure to store the support block and roll pin punch properly for future use.